

J.D.S. LIMITED
PRODUCTIONS
Custom Model Trains

DCS CONTROLLED SMOKING WHISTLE OPERATING INSTRUCTIONS

FUNCTIONALITY/OVERVIEW:

Proto/Steaming Whistle This feature allows you to enable a steaming whistle feature that adds more realism to your model by blowing steam out of the whistle whenever the whistle sound is activated. It works in conjunction with the Proto-Whistle feature. Like the Proto-Whistle feature, the Steaming Whistle is not available on all DCS equipped engines. This feature will only work on those engines that have the proper hardware and an actual whistle smoke unit. Copyright MTH Electric Trains Inc.

OPERATING INSTRUCTIONS for DCS:

1. Select the upgraded equipped engine from your DCS remote.
2. Press the SPW softkey. Softkey will highlight.
3. Your SPW softkey display will change to indicate that Proto-Whistle(sound) is active.
4. Press the FSW softkey to enable the Steaming Whistle Feature(sound/steam effect). This softkey will also highlight.
5. Roll thumbwheel up and down to activate steaming whistle function

NOTE: steaming whistle will only be activated when “SPW” and “FSW” are highlighted collectively.